



# Sure-loc® BRAND ALUMINUM PAVER EDGING Installation Instructions


**Recommended Tools:** Hammer, Hacksaw

**Recommended Anchoring Guidelines:**

Patios & Walkways	12"- 24" on center (30.5 cm - 61 cm)
Driveways	4" - 12" on center (10 cm - 30.5 cm)
Heavy Vehicular Loads	4" on center (10 cm)

## BLOCK L-EDGE/AGGREGATE L-EDGE STEPS:

1. Prepare and compact the base as recommended by the paver manufacturer for your area. The base needs to extend 6" (152mm) to 12" (305mm) beyond the edge of the paver installation.
2. Screed bedding sand\* evenly over the base to a uniform thickness of not less than 1" (25mm) and not more than 1-1/2" (38mm).
3. Install the pavers making sure that the pavers are 1/8" (3mm) to 1/4" (6mm) higher than the desired final grade.
4. Mount Sure-loc Aluminum Paver edging directly to the base, (NOT on the bedding sand) facing away from the paver.
5. Connections to be made using the 3" (76mm) sliding connectors.
6. Anchor edging with a 3/8" x 10" spiral steel spike. Follow the recommended anchoring guidelines for spike spacing.
7. Compact the pavers and spread, sweep joint sand\* into joints as recommended by the paver manufacturer in your area.

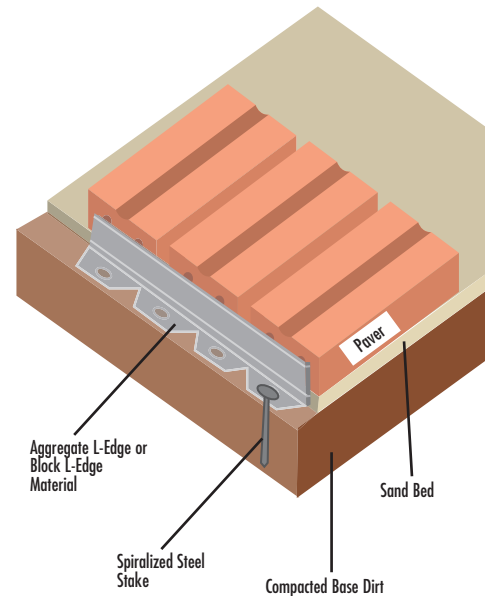

## HELPFUL TIP

**RESTRAINT UNDER PAVER:** Same as above except place edging under the paver. Be sure that edging is restraining both the paver and the bedding sand\*. (\*Refer to ICPI standards or architect's specifications)